


Service instruction

Tail lift Cracks and damages

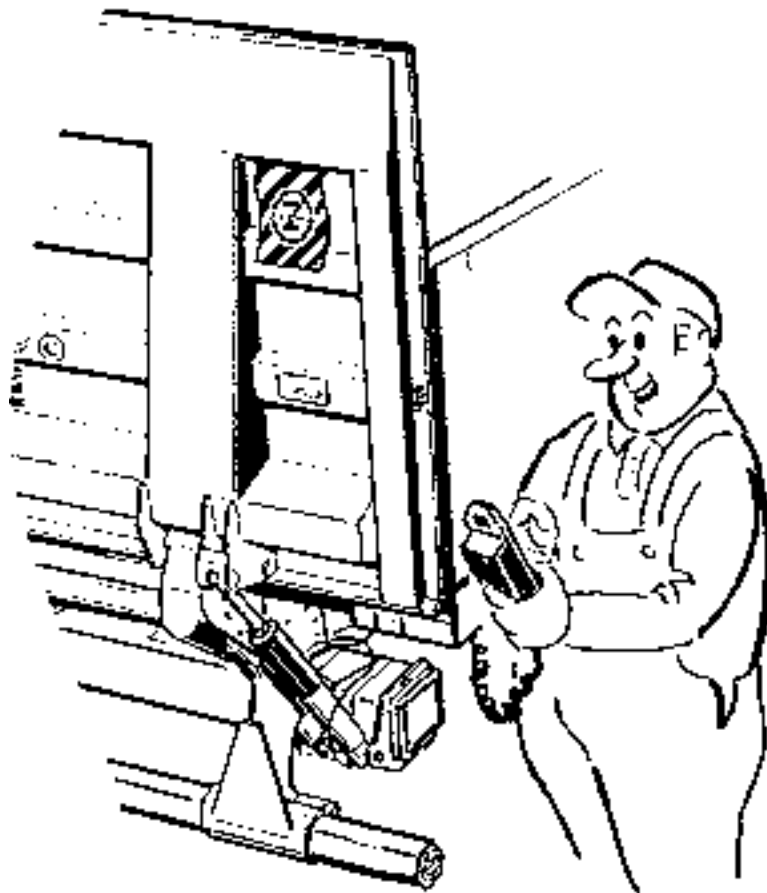

Cracks and damages

Check for cracks or any other damage to the mounting brackets, support frame, lifting arm, platform and its attachment to the liftarm and tilt cylinders, bumper bars, cylinders and slide system, if the lift is equipped with such devices, which could endanger the safe use of the tail lift.

Check that the drainage holes at bottom of the support frame are clean and functional. Even check that the condition of the gaiters of cylinders are good.

Zepro recommends that the details that have cracks or other damage that may compromise safety should be replaced and is not responsible for any defective repair that is made on your own decision.