


# ZEPRO

## Z-LYFTEN PRODUKTION AB

---

IE-0109

### Service instruction

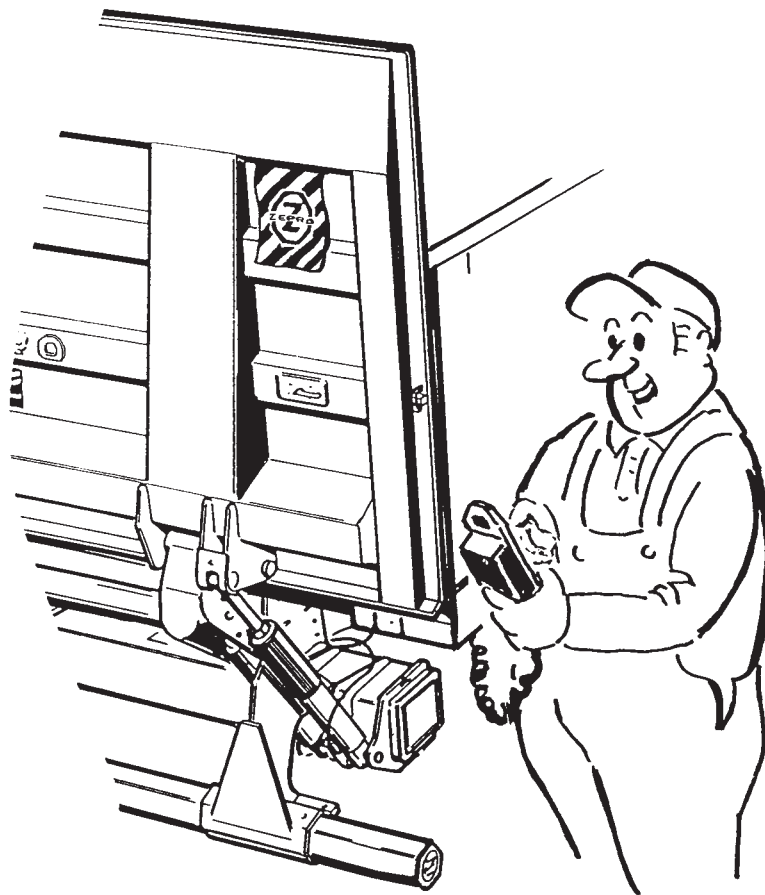

## Check and replacement at oil change L-, XL-Service

2012-05-04

---

#### Försäljning/Sales/Verkauf

Mossvägen 8, 641 49 KATRINEHOLM, SWEDEN

Telephone: +46 150 - 489550

Telefax: +46 150 - 489551

E-mail: [zepro@zepro.com](mailto:zepro@zepro.com)

#### Fabrik/Factory/Fabrik

Allévägen 4, 840 73 BISPGÅRDEN, SWEDEN

Telephone: +46 696 - 17200

Telefax: +46 696 - 17244

E-mail: [info@zepro.com](mailto:info@zepro.com)

Internet: [www.zepro.com](http://www.zepro.com)



## Check and replacement during oil change L-, XL-Service

Follow the instructions IE-0102 for the oil change.

When power is cut: Take the opportunity to check the fuse box.  
Check hydraulic units leakproofness, cabling and contact surfaces.

When the oil is drained and hydraulic unit dismantled:

L-Service, clean strainer and tank when needed.

XL Service, install the new hoses and associated rubber steel washers, suction strainer, o-rings and the solenoid.

**Warning!!** Never have a platform of folded model unfolded when you tilt it up. The platform can slam like a mousetrap that could cause material damage or personal injury. Even make sure that the platform tip doesn't conflict with body work or similar.

When new oil is refilled and lift runs up and down to the end positions for both lift- and tilt cylinders to push air out of the hydraulic system, check the tightness of hoses, hose fittings, tank and valve system.