


ZEPRO

Z-LYFTEN PRODUKTION AB

IE-0110

Service instruction

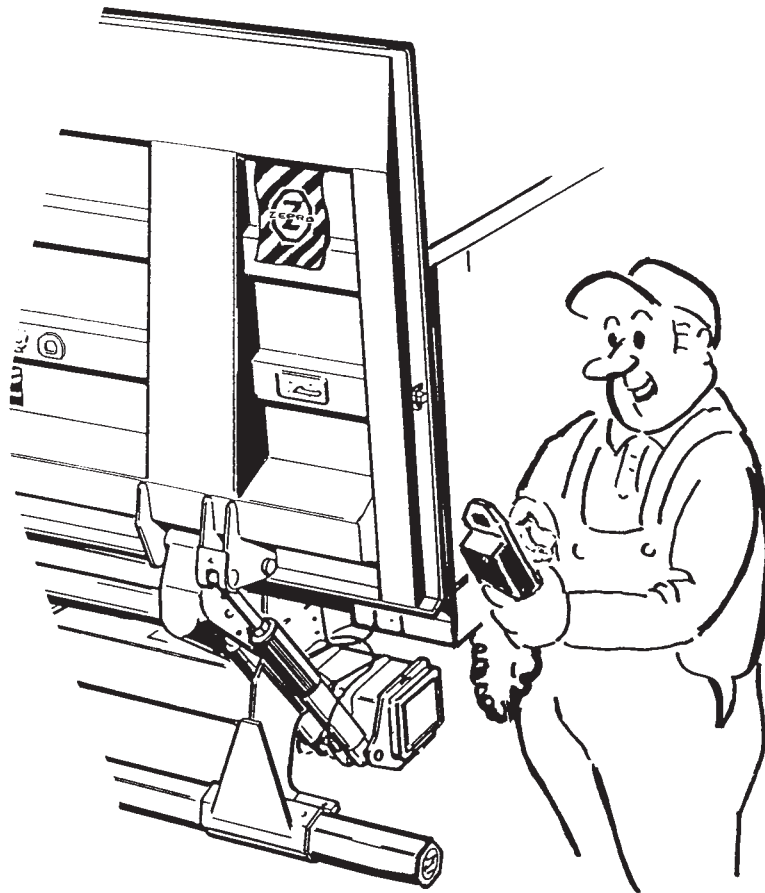

Quick Reference Guide for service sequence 1. Mechanic L-, XL-Service

2012-05-04

Försäljning/Sales/Verkauf

Mossvägen 8, 641 49 KATRINEHOLM, SWEDEN

Telephone: +46 150 - 489550

Telefax: +46 150 - 489551

E-mail: zepro@zepro.com

Fabrik/Factory/Fabrik

Allévägen 4, 840 73 BISPGÅRDEN, SWEDEN

Telephone: +46 696 - 17200

Telefax: +46 696 - 17244

E-mail: info@zepro.com

Internet: www.zepro.com

Quick Reference Guide for service sequence

1. Mechanic L-, XL-Service

- Check for cracks or other damage. See instructions IE-0105
L-service 1.1-6, 1.8
XL Service 1.1-6, 1.9
- Check for wear and tear on pivot bolts and bearings while the control of the torque occurs.
See instructions IE-0104, IE0105.
L-Service 1.1-8
XL Service 1.1-9

For XL-Service with Service Kit: Change support wheels in relation to the verification of torque for the pivot bolts the support wheels are assembled on. (If the lift is equipped with support wheels.)

- Lubricate the lifts all lubrication points. See instructions IE-0101
L-Service 1.9
XL Service 1:10
- Check the sealings against possible bodywork. See instructions IE-0106
L-Service 1:10
XL Service 1:11