


# Service instruction

## Tail lift

Quick Reference Guide for service sequence

1. Mechanic L-, XL-Service

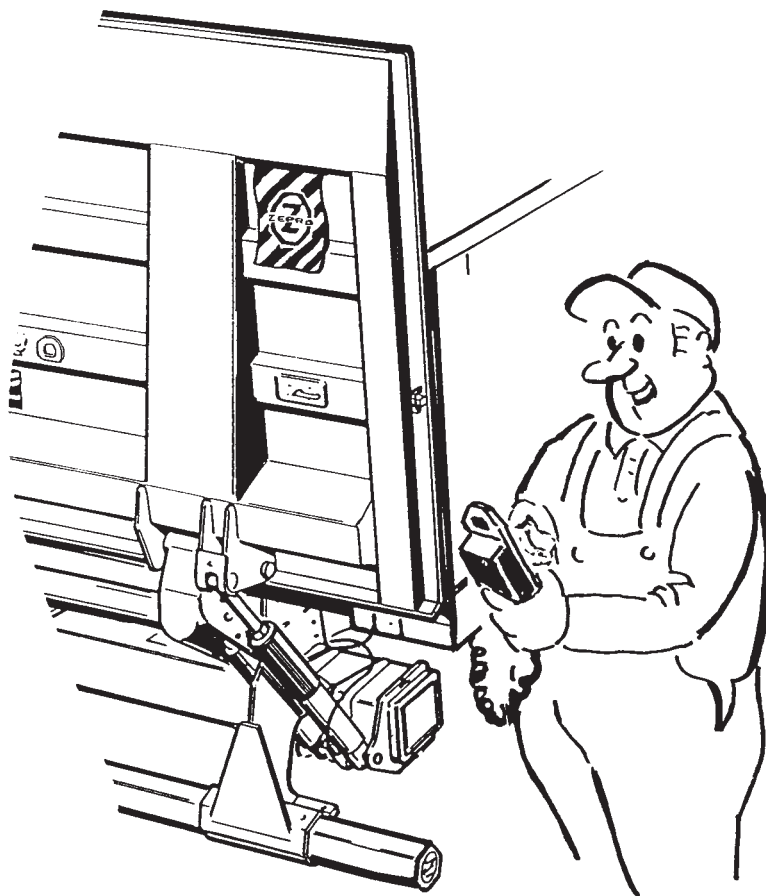



## Quick Reference Guide for service sequence

### 1. Mechanic L-, XL-Service

- Check for cracks or other damage. See instructions IE-0105  
L-service 1.1-6, 1.8  
XL Service 1.1-6, 1.9
- Check for wear and tear on pivot bolts and bearings while the control of the torque occurs.  
See instructions IE-0104, IE0105.  
L-Service 1.1-8  
XL Service 1.1-9

For XL-Service with Service Kit: Change support wheels in relation to the verification of torque for the pivot bolts the support wheels are assembled on. (If the lift is equipped with support wheels.)

- Lubricate the lifts all lubrication points. See instructions IE-0101  
L-Service 1.9  
XL Service 1:10
- Check the sealings against possible bodywork. See instructions IE-0106  
L-Service 1:10  
XL Service 1:11