

Monteringsanvisning

Installation Instruction

Monteringssats/Mounting kit 53898
MB 500 series, VW Crafter 50
Hjulbas/Wheel base, 3665 mm

Monteringssats/Mounting kit 56015
MB 500 series, VW Crafter 50
Hjulbas/Wheel base, 4325 mm

ZEPRO


Tel.: +46 (0)10-459 05 00

E-mail: zeprotech@hiab.com | zeapro.com

55434TL
2020-03-27



Monteringsanvisning / Installation instructions

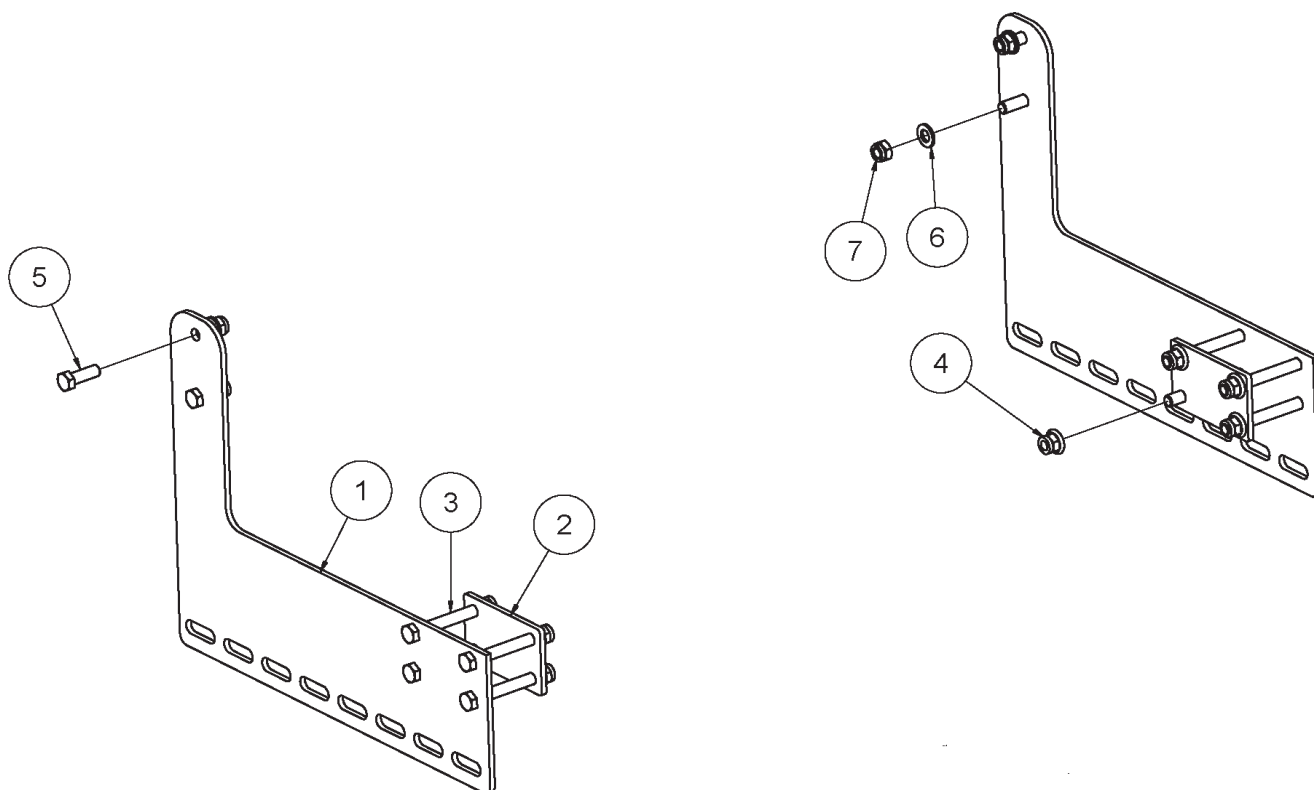

Art. nr 56015

ingående detaljer / included parts

Pos.	Benämning	Description	Antal/Qty	Art. nr.
1.	Ramfäste H/V	Bracket R/L	2	56008
2.	Förstärkning, ramfäste	Reinforcement, bracket	2	53899
3.	Skruv M12x100	Screw M12x100	8	21597
4.	Mutter M12	Nut M12	8	21980
5.	Skruv M12x35	Screw M12x35	4	21311
6.	Bricka	Washer	4	20181
7.	Mutter M12	Nut M12	4	21664

Art. nr 53898


ingående detaljer / included parts

Pos.	Benämning	Description	Antal/Qty	Art. nr.
1.	Ramfäste H/V	Bracket R/L	2	53883
2.	Förstärkning, ramfäste	Reinforcement, bracket	2	53899
3.	Skruv M12x100	Screw M12x100	8	21597
4.	Mutter M12	Nut M12	8	21980
5.	Skruv M12x35	Screw M12x35	4	21311
6.	Bricka	Washer	4	20181
7.	Mutter M12	Nut M12	4	21664

Monteringsanvisning / Installation instructions

1) Montera ramfäste för monteringsset på lastbilsschassi i befintliga hål.

1) Install bracket for mounting kit on truckframe in available holes.

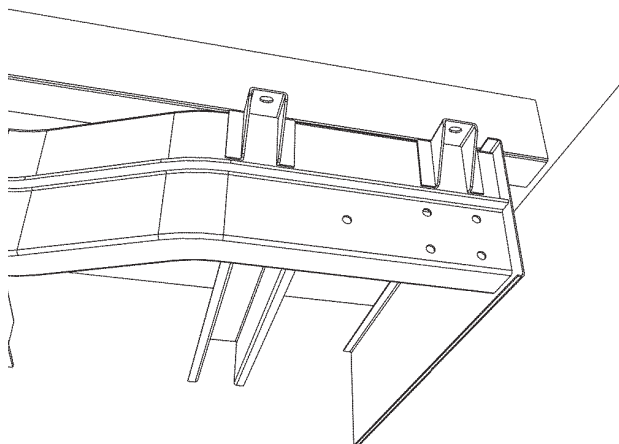


1.1) Använd 4 st. M12x100 (70-75 Nm) samt 1 st. förstärkningsplåt.

1.1) Use 4 pcs. M12x100 (70-75 Nm) and 1 pce. reinforcement plate.


1.2) Hål i hjälpram borras $\varnothing 12,5\text{mm}$. Använd 2st. M12x35 (70-75 Nm).

1.2) Drill the $\varnothing 12,5\text{mm}$ holes in the subframe. Use 2 M12x35 (70-75 Nm)

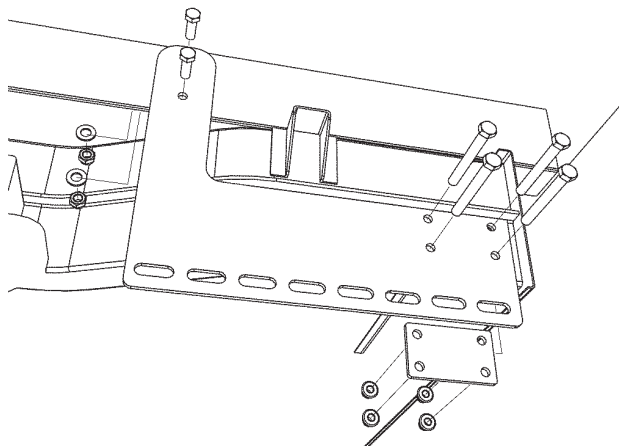


2. Montera lyft enligt ordinarie anvisning.

2. Install tail-lift according to the ordinary installation instructions.

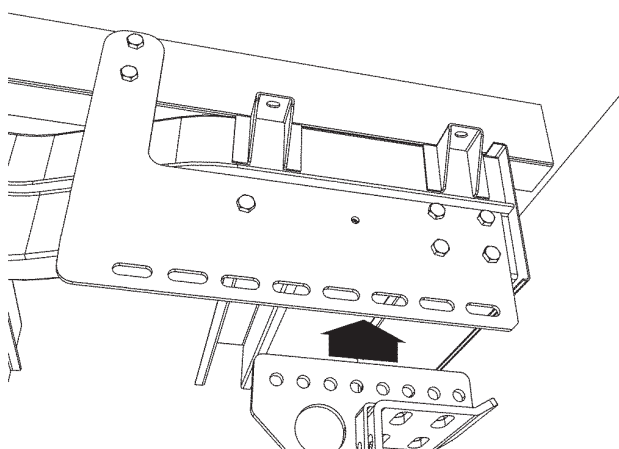


OBS! Vid montering av lyft på lastbilar med korta överhäng kan det vara nödvändigt att göra urskärningar i bakkant av chassi

NB! When installing tail lift on trucks with short overhang it is necessary to make cut-outs for the liftarm on the back of the truckframe.

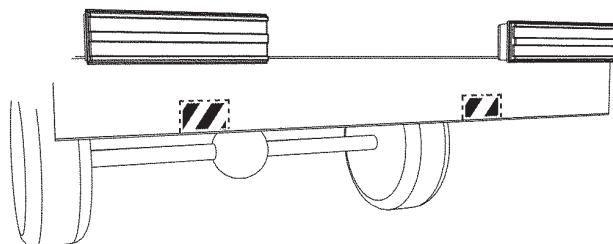

Monteringssats / Mounting kit

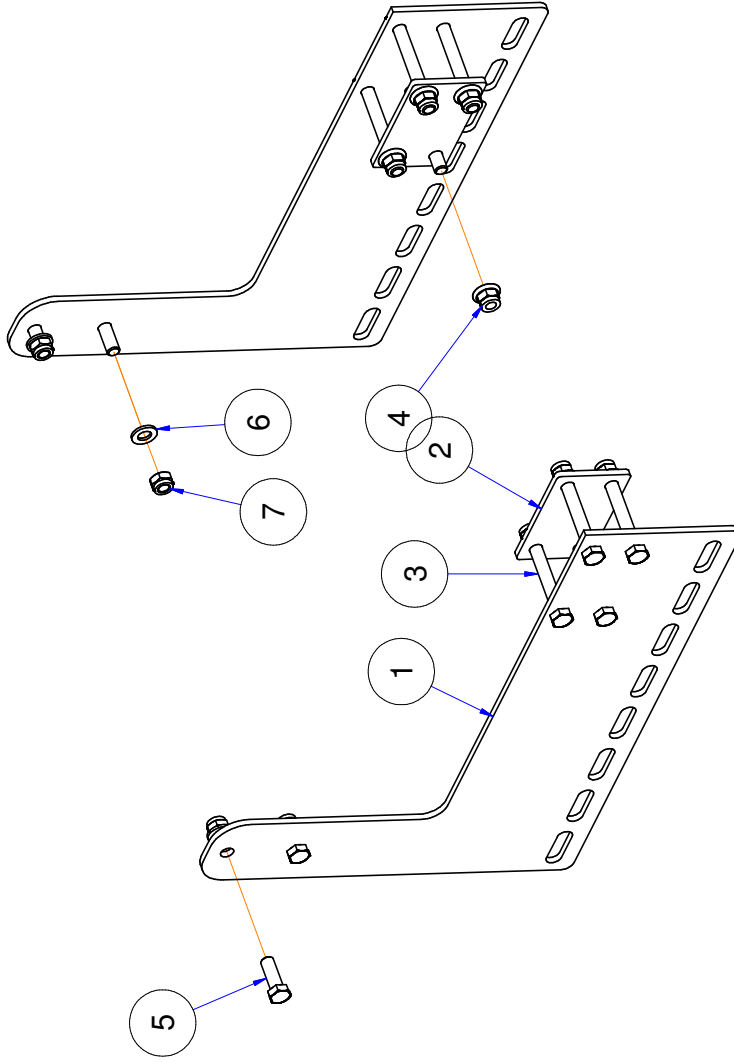

7	4	Sextantsmutter M12 Loc-king/ Hex Nut	21664TL	DIN 985 - M12	1
6	4	Bricka/ Plain washer	20181TL	ISO 7089 - 12-140HV	5
5	4	Sextantskruv/ Hexagon head screw	21311TL	ISO 4017 - M12 x 35	5
4	8	Mutter M6MF M12 Loc-king/ Nut M12	21980TL	ISO 7043 - M12	
3	8	Sextantskruv/ Hexagon head screw	21597TL	ISO 4014 - M12 x 100	1
2	2	Försiärkning ramfäste/ Reinforcement Mounting bracket	53999TL	Z47346	
1	2	Ramfäste/ Mounting bracket	56008TL	Z47375	
Item Qty		Title/Description	Stock nr.	Drawing nr.	Rev.
Monteringssets Z 4575		WB 515, Dubbelhjul, WB = 4325	Working preparation unless otherwise specified	Measures intended unless product is for materials and drawing use	
Mounting kit Z 4575			Welding		
Material			Surface finish:	Sheet	1/1
Dimension		Weight (kg)	Tolerance:		
Date		Weight (kg)	Stock nr.	Size	A3
2007-01-15		10.5	56015TL		Revision
Designer		Scale	Drawing nr.		
TP		1 : 4			
Drawn		ME			
Checked by		CL			
Approved by					
Z-Lyften Produktion AB					
ZEPRO					
A CARQUEST EC BRAND					

- M12..... 70-75 Nm.
All defined tightening torques applies when use of torque wrench or nut runners with torque control (torque spread max 5%).



A triangle with the letter 'B' inside it.



HIAB

BUILT TO PERFORM

Zepro, Del och Waltco är Hiabs varumärken för bakgavellyftar. Hiab är en världsledande leverantör av utrustning, intelligenta tjänster och digitala lösningar för vägburen lasthantering. Som branschpionjär är vårt åtagande att öka effektiviteten i våra kunders verksamheter och att forma framtiden för intelligent lasthantering.