


ZEPRO

Z-LYFTEN PRODUKTION AB

55980

MONTERINGSANVISNING INSTALLATION INSTRUCTIONS

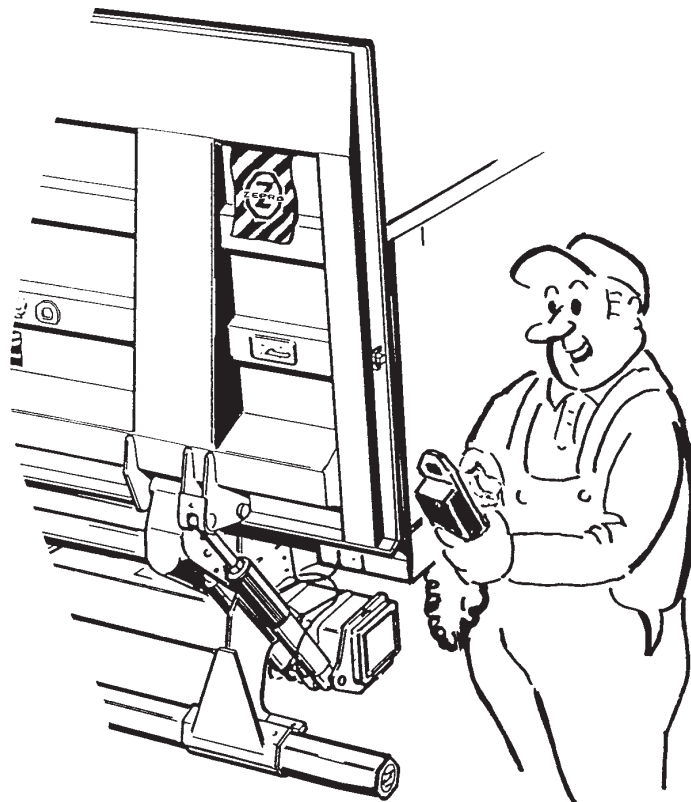

Monteringssats / Mounting kit 57411

Universal fäste, fjäderinfästning

Universal bracket, suspension bracket

2010-09-08

Försäljning/Sales/Verkauf

Mossvägen 8, 641 49 KATRINEHOLM, SWEDEN

Telephone: +46 150 - 489550

Telefax: +46 150 - 489551

E-mail: zepro@zepro.com

Fabrik/Factory/Fabrik

Allévägen 4, 840 73 BISPGÅRDEN, SWEDEN

Telephone: +46 696 - 17200

Telefax: +46 696 - 17244


E-mail: info@zepro.com

Internet: www.zepro.com

Monteringsanvisning / Installation instruction

Art. no 57411

ingående detaljer / included parts

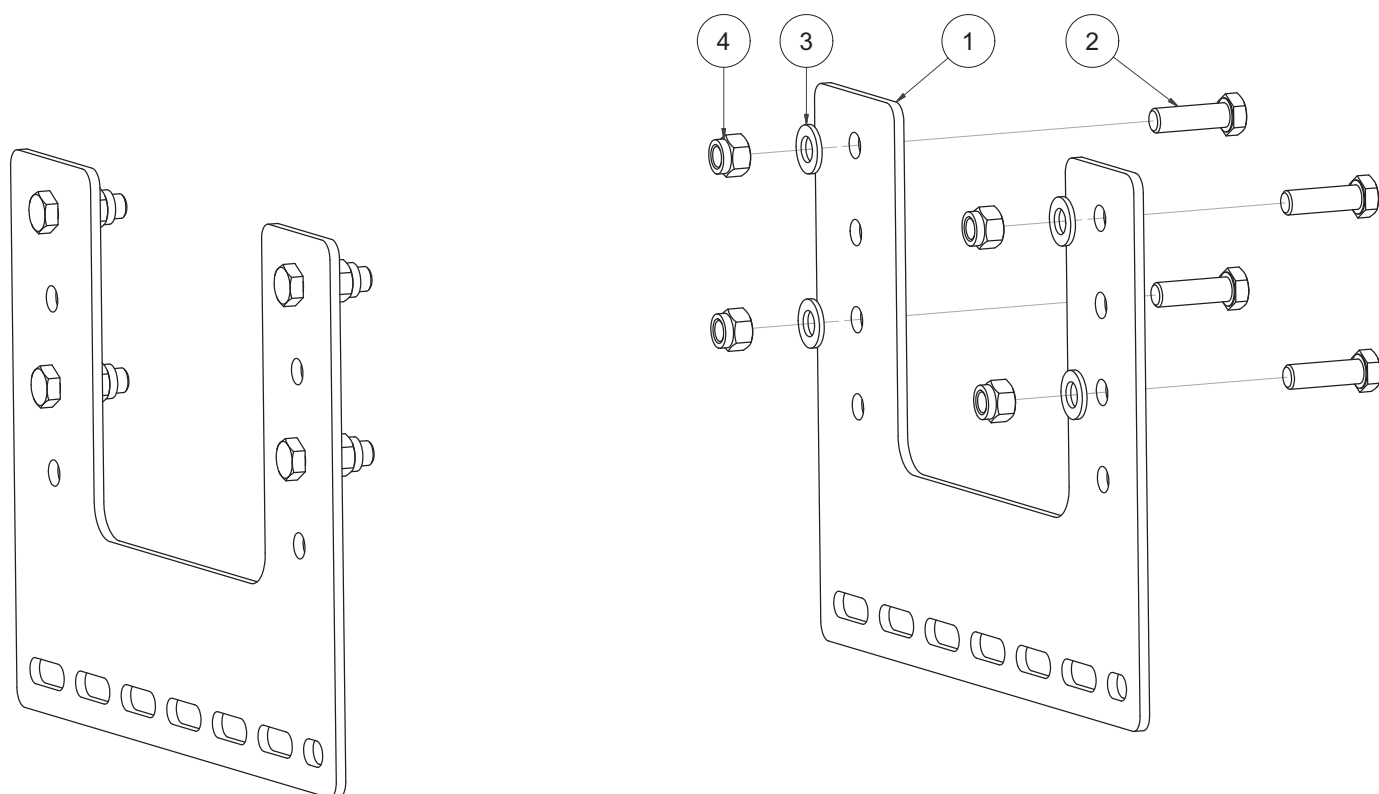


Pos.	Benämning	Description	Antal/Qty	Art. nr.
1.	Chassie fäste	Chassie bracket	2	57410
2.	Sexkantskruv M14x45	Hexagon screw M12x45	8	64556
3.	Bricka	Washer	8	22213
4.	Sexkantsmutter M14	Hexgon nut M14	8	21484

Monteringsanvisning / Installation instruction

1. Montera fästet runt fjäderinfästningen. Justera in det för bästa passform. Borra Ø 14 mm hål i hjälpramen och chassieramen. Montera minst 2 skruv M14 i hjälpramen och 2 st. M14 i chassiet. Åtdragnings moment 120 Nm

1. Install the bracket around the suspension bracket. Adjust it for best fit. Drill Ø 14 mm holes in sub frame and chassis frame. Use at least 2 screws M14 in the subframe and 2 pcs. M14 in the chassis frame. Torque 120 Nm

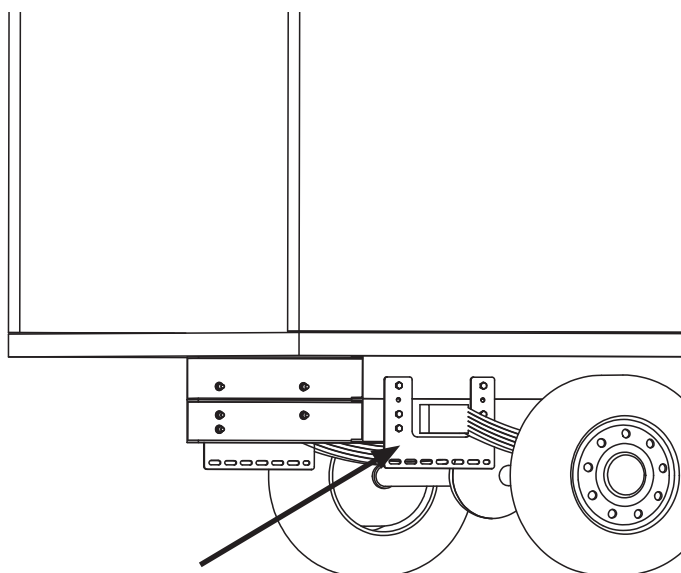

2. Montera lyften enligt ordinarie anvisning (art. nr 54989, svenska).

2. Install tail lift according to standard installation instruction (art. no. 54990, english).

